

Massager AV Wand

Instructions

Before Use

1. Fully charge for about 90 minutes.
2. Rinse it with clean water or mild detergent then dry with towel but avoid direct contact between water and charging port

Direction for Use

1. Long press ON for 3 seconds
2. Set to the mode that you find exciting about
3. Press +/- to change speed of intensity from high to low
4. The head cover could be removed and replaced by other covers
5. Any confusion please refer back to the demonstrated video Or contact us.

After Use

1. Rinse it with clean water and sterilize it, then dry with towel or let it air dry.
2. Avoid direct sunshine and keep it out of reach of children or pets.

Precautions

1. Stop using the product if it is found to have a deformed surface.
2. The product is only aimed to people over 18 years old.