

Dual Density (Warming) Vibrating & Rotating Dildo

Instructions

Before Use

1. Fully charge for about 2 hours.
2. Rinse it with clean water or mild detergent then dry with a towel but avoid direct contact between water and charging port.
3. Lubricate the product for easier insertion and water-based lube is recommended.

Direction for Use

1. Gently insert to allow a comfortable and pleasant feeling.
2. Set to the mode that you find exciting about, the upper flash button is the boost button.
3. Long press the flash button for 3 seconds to activate the warming, wait about 2 minutes.
4. Extra fun: Take out the remote control to let yourself or others control your excitement.
5. Any confusion please refer back to the demonstrated video or contact us.

After Use

1. Rinse it with clean water and sterilize it, then dry with towel or let it air dry.
2. Avoid direct sunshine and keep it out of reach of children or pets.

Precautions

1. Stop using the product if it is found to have a deformed surface.
2. The product is only aimed at people over 18 years old.