

# Vibrator

# Instructions

## Before Use

1. Fully charge for about 90 minutes.
2. Rinse it with clean water or mild detergent then dry with towel but avoid direct contact between water and charging port.
3. Lube or water on the product is recommended.

## Direction for Use

1. Turn it on
2. Try every mode and let it do the rest of the work.
3. Any confusion please refer back to the demonstrated video or contact us.

## After Use

1. Rinse it with clean water and sterilize it, then dry with towel or let it air dry.
2. Avoid direct sunshine and keep it out of reach of children or pets.

## Precautions

1. Stop using the product if it is found to have a deformed surface.
2. The product is only aimed at people over 18 years old.